



- ➤ This is an additional filler required for filling Soda/soft Drinks in glass bottles.
- ➤ It must be connected to an existing Carbonator with the help of a connecting hose provided with the machine.
- ➤ This unit consists of a M.S. Stand on which are mounted the Filling Head and the Capping arrangement with the foot.

 First a crown cork is fixed inside the head. Then a bottle is kept on the bottle table. On lifting of a lever, soda flows into the bottle through a filling valve. To eliminate the air inside the bottle, a shifting valve is provided. Thus when the bottle is being filled, the air is eliminated through the shift valve. Due to this, some amount of soda also flows out through the shift valve. This is unavoidable. When the bottle is full, the lever is released and the foot pedal pressed for capping the bottle. The bottle is then removed and the next crown cork and bottle are kept and the whole process is repeated.
- > By using this machine in conjunction with the main filler, the production is doubled.
- ➤ The Filling Head and the foot assembly are the same as in the main machine and therefore maintenance and operating procedures are also the same.
- > This machine can be supplied pneumatically operated also.





Showroom & Demo Center

2 & 3, Rajagopal Layout, Avarampalayam Road, Peelamedu, Coimbatore - 641 004. Tamil Nadu, India. Ph: 0422 - 2563470 Mob: 7397395652

City Showroom

194 - A, Ranga Konar Street, Kattoor, Coimbatore - 641 009. Tamil Nadu, india. Ph: 0422 - 2233257 Mob: 94439 36151

Factory

1/11, Venkataswamy Naidu Industrial Estate, Bharathi Colony, Peelamedu, Coimbatore - 641 004. Tamil Nadu, India.

Ph: 0422 - 2563450 / 2563480 / 2563191 Mob: 99525 66600 / 98422 56525

Email: mgindcbe@gmail.com / mohd_mamoo@hotmail.com Website: www.advancemachineryindia.com